

## Konfigurering av handskanner Symbol LS1203.

Skanna alla koderna uppifrån och ned:

1/9.

Defaults




2/9.


USB Device Type Default (HID Keyboard Emulation)




**Disable UPC-A**

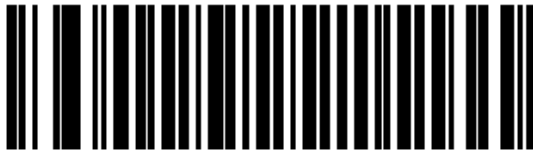

**Disable UPC-E**

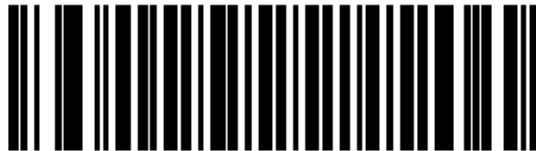

**Disable EAN-13**

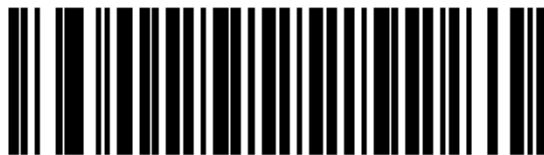

**Disable EAN-8**



**Disable Code 128**




### Disable GS1-128

Formerly known as UCC/EAN 128



### Disable Code 39

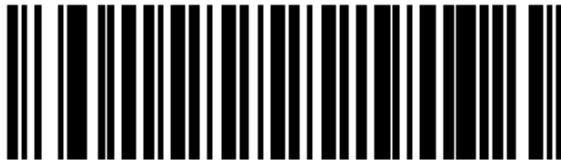

### \*Enable Interleaved 2 of 5



### 1 2 of 5 - One Discrete Length



0



8