

Konfigurering av handskanner Symbol LS2208.

Skanna alla koderna uppifrån och ned.


1/10.

Defaults




2/10.

USB Device Type Default (HID Keyboard Emulation)

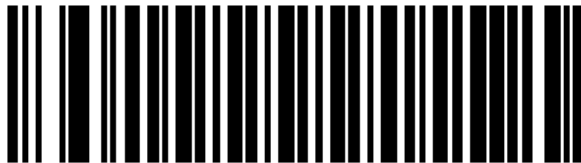

Disable UPC-A

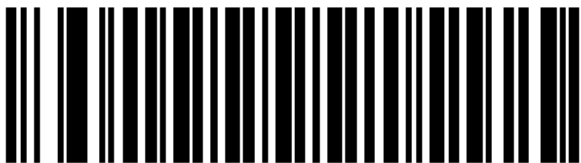


Disable UPC-E



Disable EAN-13




Disable EAN-8

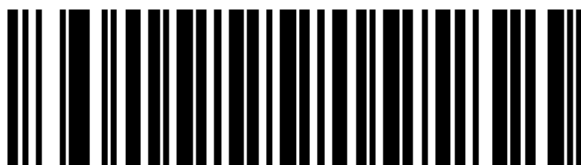

Disable Code 128



Disable UCC/EAN-128

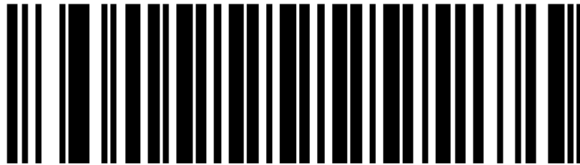


Disable Code 39



***Enable Interleaved 2 of 5**



1 2 of 5 - One Discrete Length

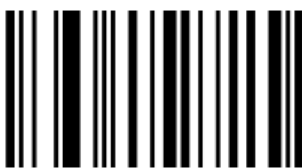

0



8